


EXTERIOR VIEW




SHOWN IN MOCK 4 INCH DRYWALL

FRONT DIMENSIONS

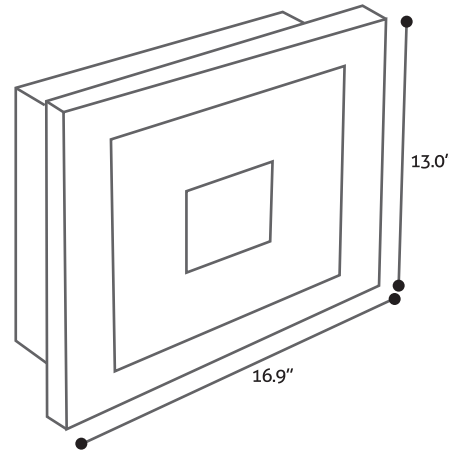


DOOR OPENING MEASURES 11" x 10"


REAR DIMENSIONS

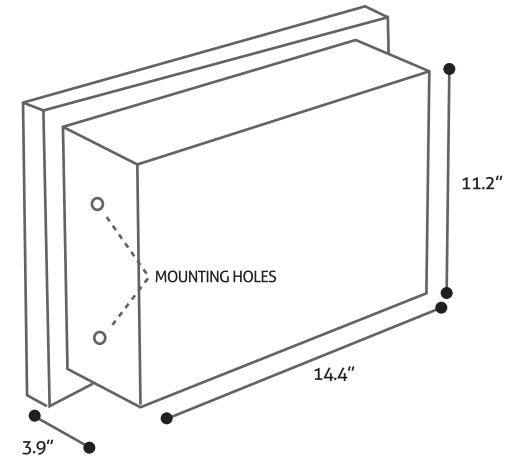

FAST, SIMPLE INSTALLATION

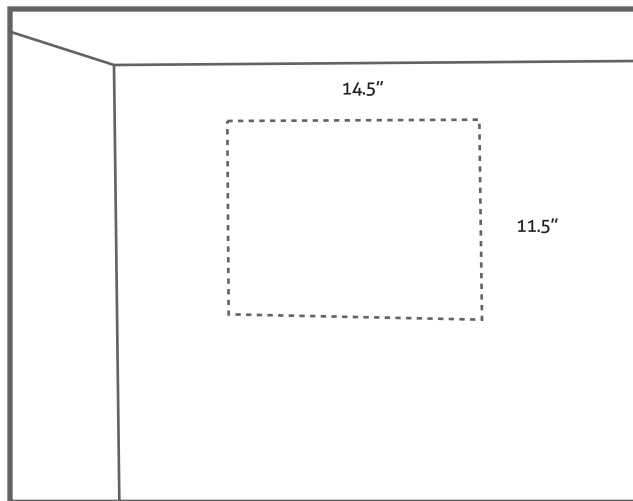

Locate wall studs and mark cut-out with pencil lines.

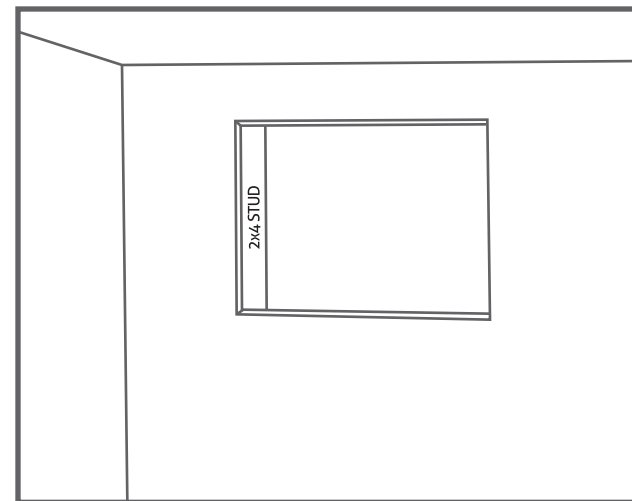

Cut sheetrock, insert safe and anchor to studs with drywall screws.